

# **-FUJIOH-**

Built-in Electric Oven  
Operating / Installation Manual

**FV-EL61**

Please read this manual carefully  
before using this appliance.

# CONTENTS

ACKNOWLEDGMENT.....	2
WARNING.....	2
SAFETY HINTS.....	5
FITTING THE OVEN INTO THE KITCHEN UNIT.....	5
IMPORTANT.....	5
DECLARATION OF COMPLIANCE.....	5
PRODUCT DESCRIPTION.....	6
OPERATION INSTRUCTIONS.....	7
Clock Setting.....	7
Function Setting.....	7
Lamp Setting.....	7
Inquiring Function.....	7
Child lock Function.....	8
Reminder Function.....	8
Start/Pause/Cancel Function.....	8
Energy-Saving Function.....	8
Preset Function.....	9
Note.....	9
ACCESSORIES.....	10
SHELF PLACEMENT WARNING.....	11
BULB REPLACEMENT.....	11
SECURING THE OVEN TO THE CABINET.....	11
VENTILATING OPENINGS.....	12
CONNECTION OF THE OVEN.....	12
INSTALLATION.....	12
Recipes for ECO mode.....	13
CLEANING AND MAINTENANCE.....	13

# ACKNOWLEDGMENT

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using the product are familiar with these instructions as well.

## WARNING

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run up the new empty product with the conventional cooking function, 250 °C, 90 minutes to clean oil impurities inside the cavity.
- During the first use, it is completely normal that there will be a slight smoke and odors. If it does occur, you merely have wait for the smell to clear before putting food into the oven.
- Please use the product under the open environment.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not allow children to go near the oven when it is operating, especially when the grill is on.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- A steam cleaner is not to be used.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Appliance must not be installed behind a decorative door in order to avoid overheating.

## SAFETY HINTS

- Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
- For oven: Oven door should not be opened often during the cooking period.
- The appliance must be installed by qualified personnel. The producer and supplier are not responsible for any damage that might be caused by defective placement, and installation by unqualified personnel.
- When the door or drawer of oven is open do not leave anything on it, you may unbalance your appliance or break the door.
- Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.

## FITTING THE OVEN INTO THE KITCHEN UNIT

Fit the oven into the space provided in the kitchen unit; it may be fitted underneath a work top or into an upright cupboard. Fix the oven in position by screwing into place, using the two fixing holes in the frame. To locate the fixing holes, open the oven door and look inside. To allow adequate ventilation, the measurements and distances adhered to when fixing the oven.

## IMPORTANT


If the oven is to work properly, the kitchen housing must be suitable. The panels of the kitchen unit that are next to the oven must be made of a heat resistant material. Ensure that the glues of units that are made of veneered wood can withstand temperatures of at least 120 °C. Plastics or glues that cannot withstand such temperatures will melt and deform the unit, once the oven has been lodged inside the units, electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The hob must have a rear gap of at least 45 mm.

## DECLARATION OF COMPLIANCE

When you have unpacked the oven, make sure that it has not been damaged in any way. If you have any doubts at all, do not use it: contact a professionally qualified person. Keep packing materials such as plastic bags, polystyrene, or nails out of the reach of children because these are dangerous to children.



# PRODUCT DESCRIPTION

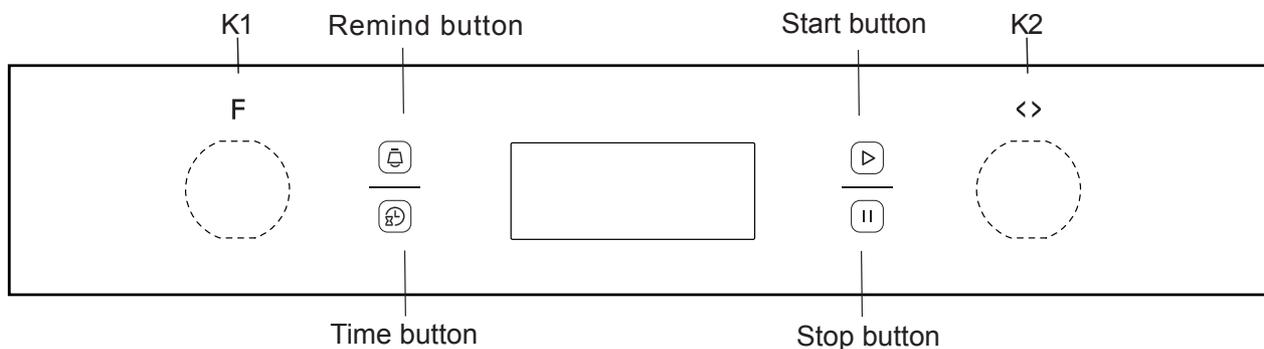

Symbol	Function description
	Oven Lamp: Which enables the user to observe the progress of cooking without opening the door. Oven lamp will light for all cooking functions. except ECO function.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food, (without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc.
	Bottom heater: A concealed element in the bottom of the oven provides heat. It is mainly used for keeping food warm. The temperature can be set within the range of 60-120°C. The default temperature is 60°C.
	Conventional cooking: The top and bottom work together to provide convectional cooking. The temperature can be set within the range of 50-250°C. The default temperature is 220°C.
	Convention with fan: Combination of the fan and both heating element provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature. The temperature can be set within the range of 50-250°C. The default temperature is 220°C.
	Double grilling: The inside radiant element and top element are working. The temperature can be set within the range of 150-240°C. The default temperature is 210°C.
	Double grilling with fan: The inside radiant element and top element are working with fan. The temperature can be set within the range of 150-240°C. The default temperature is 210°C.
	Radiant grilling: The inner grill element switches on and off to maintain temperature. The temperature can be set within the range of 150-240°C. The default temperature is 210°C.
	For energy-saved cooking. Cooking the selected ingredients in a gentle manner, and the heat comes from the top and the bottom. The temperature can be set within the range of 50-250°C. The default temperature is 160°C.

# OPERATION INSTRUCTIONS

## 1. Clock Setting

After connecting the unit to the power, the symbols " 0:00 " will be visible on the display.

1> Press "  ", the hour figures will flash.

2> Rotate " K2 " to adjust the hour figures, (time should be within 0--23).

3> Press "  ", the minutes will flash.

4> Rotate " K2 " to adjust the minutes setting, (time should be within 0--59).

5> Press "  " to finish the clock settings. " : " will flash, and the time will be illuminated.

Note: 1> The clock is 24 hours. After power on, if not set, the clock will show " 0:00 ".

2> The step quantities for the adjustment time of the knobs are as follow:

0--0:30min: step 1 minute 0:30--9:00hour: step 5 minutes

## 2. Function Setting

1> Rotate " K1 " to choose the cooking function you require. The related symbol will illuminated .

2> Rotate " K2 " to adjust the temperature.

The step quantities for the adjustment of temperature is 5°C.

3> Rotate " K2 " to adjust the temperature when cooking begins. The related indicator will be illuminated.

Then press "  " to start cooking. If "  " not pressed in 3seconds, the oven will revert back to the previous temperature to continue cooking.

4> Press "  " to confirm the start of cooking.

5> Rotate " K1 " to adjust the cooking time when cooking begins. Then press "  " to confirm.

If "  " not pressed within 3 seconds, the oven will revert back to the previous time to continue cooking.

6> If step 2 is ignored, Press "  " to confirm the start of cooking and the default time is 9 hours, the default temperature will display on the LED.

7> The temperature will start blinking until it reach the temperature selected followed by a "beeping" sound.

## 3. Lamp Setting

1> Rotate " K1 " to select the relevant function, then the corresponding icon will be on.

2> Press "  " to start, " 0:00 " and lamp "  " will light up, " : " will flash.

NOTE:

## 4. Inquiring Function

In the following states, you can use inquiring function, after 3 seconds return to the current state.

1> During working state, if the clock was set, press "  " to see the current time;

if the reminder function was set, press "  " to see the time of reminder.

2> In reminding state, if the clock was set, press "  " to see the current time.

3> In clock display state, if the preset function was set, press "  " to see the End cooking time.

## 5. Child lock Function

To Lock : press "▶" and "⏸" simultaneously for 3 seconds, there will be a "beeping" sound and the "🔒" will be illuminated.

To Unlock : press "▶" and "⏸" simultaneously for 3 seconds, there will be a "beeping" sound indicating the child lock is released.

## 6. Reminder Function

This function will help to remind you to start cooking in a certain time from 0:01 to 9:59.

Only when oven in standby mode, the reminder can be set. Follow below to set the reminder:

- 1> Press "🔔";
- 2> Rotate "K2" to set the hour time of reminder. (Time should be within 0--9).
- 3> Press "🔔" again;
- 4> Rotate "K2" to set minute time of reminder. (Time should be within 0--59).
- 5> Press "▶" to confirm setting. The time will count down.

Note: The oven buzzer will sound for 10 times after the time back to the zero hour.

You can cancel the reminder during setting by pressing the stop button; After the reminder has been set, you can cancel it by pressing stop button twice.

## 7. Start/Pause/Cancel Function

- 1> If the cooking time has been set, press "▶" to start cooking. If the cooking is paused, press "▶" to resume cooking.
- 2> During cooking process, press "⏸" once to pause the cooking. Press "⏸" twice to cancel the cooking.

## 8. Energy-Saving Function

- 1> In waiting state and reminding state, press "▶" for three seconds, the LED display will go off and set to energy-saving mode.
- 2> If no operation in 10 minutes under waiting state, the LED display will go off and go into energy-saving mode.
- 3> Under the energy-saving mode, press any key or rotate any knob can quit the energy-saving mode.

## 9. Preset Function

1> To use preset function, please first set current time and decide on the end cooking time.

a) Then press "".

b) Rotate K2 to set the hour time of end cooking time. Time should be within 0 to 23. If the end cooking time is 17:30, please set 17 for the hour.

c) Press "" again.

d) Rotate K2 to set minute time of end cooking time. Time should be within 0 to 59. If the end cooking time is 17:30, please set 30 for the minute.

e) Turn K1 to choose function.

2> Press "" to set cooking time duration and temperature. Then turn K1 to adjust time and K2 to adjust temperature.

Please note that cooking duration time must not be longer than the End cooking time duration, else the oven will operate immediately.

Eg, Real Time is 12pm, End Cooking Time set is 17:30, Cooking Time Duration is set for 6 hours.

The oven will start immediately and actual cooking duration will be reduced to 5 hours and 30 mins to meet the end cooking time set at 17:30.

3> Press the "" to complete cooking setting, and the clock will be shown on the screen with preset "".

Preset time can be checked by pressing "". The clock will show on the screen after 3 seconds.

4> The cooking will start automatically after a buzzing sound upon the start cooking time. If you have set the cooking time duration to be 2 hours, the cooking will start at 15:30. The preset "" will disappear and other indication signs will appear.

Note:

1> Lamp, defrost, probe can't be preset.

2> During the status of preset, press "" once, function, temperature and cooking will be shown with menu icon lighting constantly. Press again to cancel the preset function or press "" to return to preset status.

3> Reminder function is invalid during preset status.

## 10. Note

1> The oven lamp will be on for all functions. (except ECO function)


2> Once the cooking programme has been set and the "" is not pressed within 5 minutes, the current time will be displayed or turn back to waiting state. The setting program will be invalid.

3> The buzzer will sound once when effectively pressed, if not effectively pressed there will be no response.


4> The buzzer will sound five times to remind you when cooking has finished.

## ACCESSORIES

Wire Rack : For grill, dishes, cake pan with items for roasting and grilling.

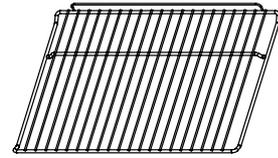


Baking Tray & Deep Baking Tray: For cooking large quantities of food such as moist cakes, pastries, frozen food etc, or for collecting fat/ spillage and meat juices.

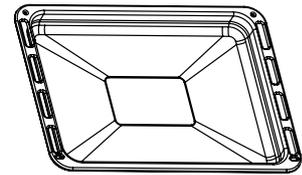



## SHELF PLACEMENT WARNING:

To ensure the oven rack operate safely, correct placement of the rack between the side rail is imperative. Rack and the pan only can be used between the first and fifth layers.

The rack should use with the right direction, it will ensure that during careful removal of the shelf or tray, hot food items should not slide out.

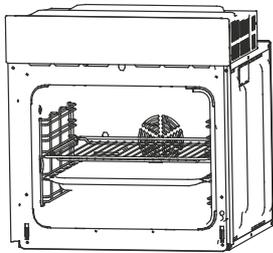

OR

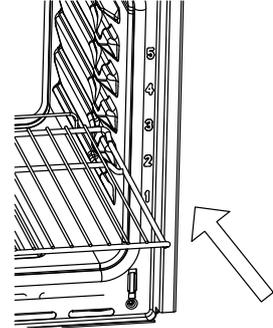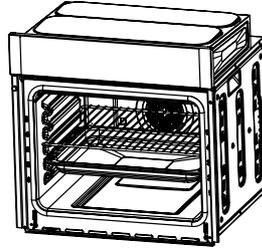


## BULB REPLACEMENT

For replacement, process as follows:


1. Switch off the circuit breaker of the unit's mains outlet.
2. Unscrew the glass lamp cover by turning it counter-clockwise (note, it may be stiff) and replace the bulb with a new one of the same type.
3. Screw the glass lamp cover back in place.

NOTE: Only use 25W/220V-240V , T300°C halogen lamps.

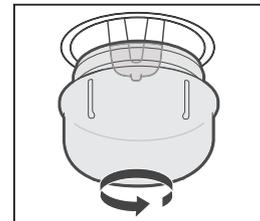


## SECURING THE OVEN TO THE CABINET

1. Fit oven into the cabinet recess.
2. Open the oven door.
3. Secure the oven to the kitchen cabinet with two distance holders " A " which fit the holes in the oven frame and fit the two screws " B " .

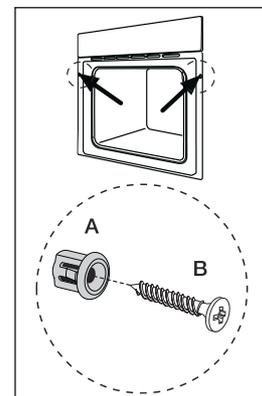


## VENTILATING OPENINGS


When cooking is finished or in pause state or in waiting state, if the oven's center temperature is over 75 degree, the cooling fan will continue working for 15 minutes. Or when the oven's center temperature becomes lower than 75 degree, the cooling fan will stop in advance.

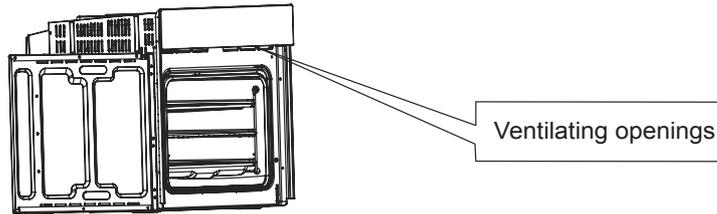

## CONNECTION OF THE OVEN

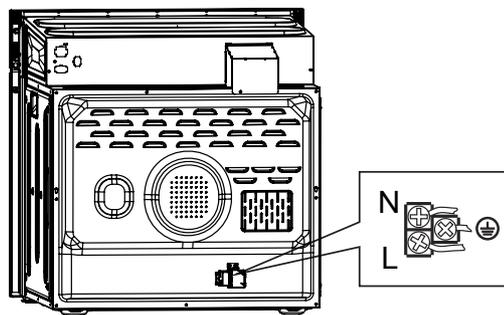

## INSTALLATION

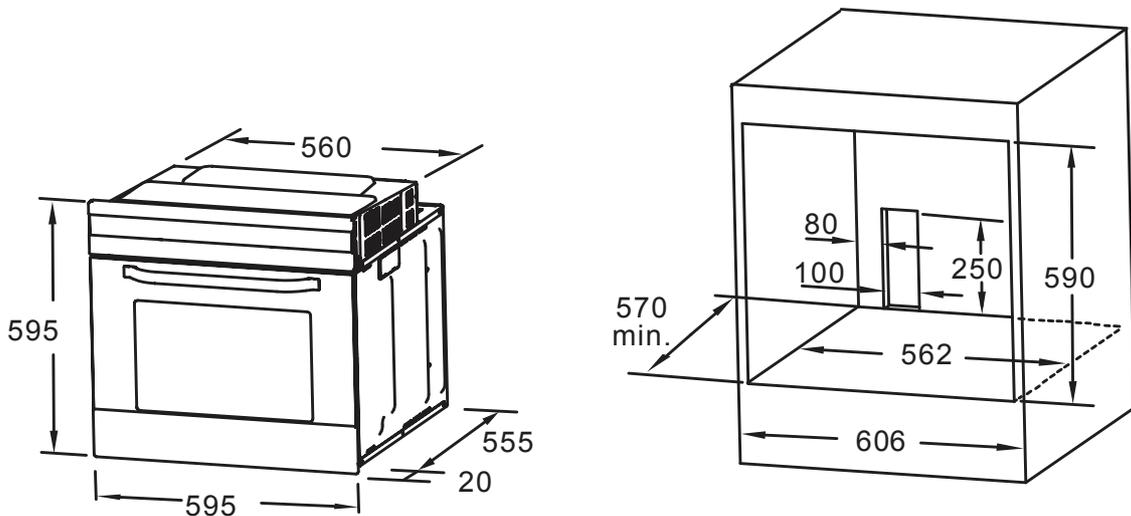

Remark:

1. Only plus deviations are admissible for all dimension.
2. The cabinet is not include the power switch or socket.

NOTE: The number of accessories included depends on the particular appliance purchased.

## Recipes for ECO mode

Recipes	Temperature (C°)	Level	Time (min)	Pre-heat
Potato Cheese Gratin	180	1	90-100	No
Cheese Cake	160	1	100-150	No
Meatloaf	190	1	110-130	No

## CLEANING AND MAINTENANCE

For the sake of a good appearance and reliability, keep the unit clean. The modern design of the unit facilitates maintenance to a minimum. The parts of the unit which come into contact with food have to be cleaned regularly.

- Before any maintenance and cleaning, disconnect the power.
- Set all controls in the OFF position.
- Wait until the inside of the unit is not hot but only slightly warm-cleaning is easier than when warm.
- Clean the surface of the unit with a damp cloth, soft brush or fine sponge and then wipe dry.  
In case of heavy soiling, use hot water with non-abrasive cleaning product.
- For cleaning the glass of the oven door, do not use abrasive cleaners or sharp metal scrapers, these can scratch the surface or lead to the glass being damaged.
- Never leave acidic substances (lemon juice, vinegar) on stainless steel parts.
- Do not use a high pressure cleaner for cleaning the unit. The baking pans may be washed in mild detergent.

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.





Global Website  
[www.fujioh.com](http://www.fujioh.com)

**FUJIOH INTERNATIONAL TRADING PTE.LTD.**

Southeast Asia Regional Headquarters  
130 Joo Seng Road #05-05 Singapore 368357  
Tel : (65) 6286 3286 Fax : (65) 6285 3285  
E-mail : [fit@fujioh.com.sg](mailto:fit@fujioh.com.sg)  
Rev1 2021